MODEL: 50238

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS FOUNTAIN SHOULD TAKE APPROXIMATELY 20 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

UNPACK THE FOUNTAIN

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS: LIGHT ASSEMBLY WITH (2) SMALL SCREWS, (2) MR–16 BULBS, UPPER FOUNTAIN BODY, LOWER FOUNTAIN BODY, LID, RESERVOIR, LIGHT TRANSFORMER, PUMP, (2) MIDDLE–SIZED SCREWS, (2) METAL WASHERS, (2) LARGE SCREWS AND A BAG OF RIVER STONES.

TOOLS NEEDED (NOT SUPPLIED): SCREWDRILLER.

FOUNTAIN ASSEMBLY

1. PLACE PUMP INTO RESERVOIR, PLACE LOWER FOUNTAIN BODY ONTO TOP OF THE RESERVOIR, MAKE SURE PUMP POWER CORD EXITS FROM NOTCH ON BACK OF LOWER FOUNTAIN BODY. THEN SECURE LOWER FOUNTAIN BODY TO RESERVOIR WITH (2) METAL WASHERS AND (2) LARGE SCREWS.

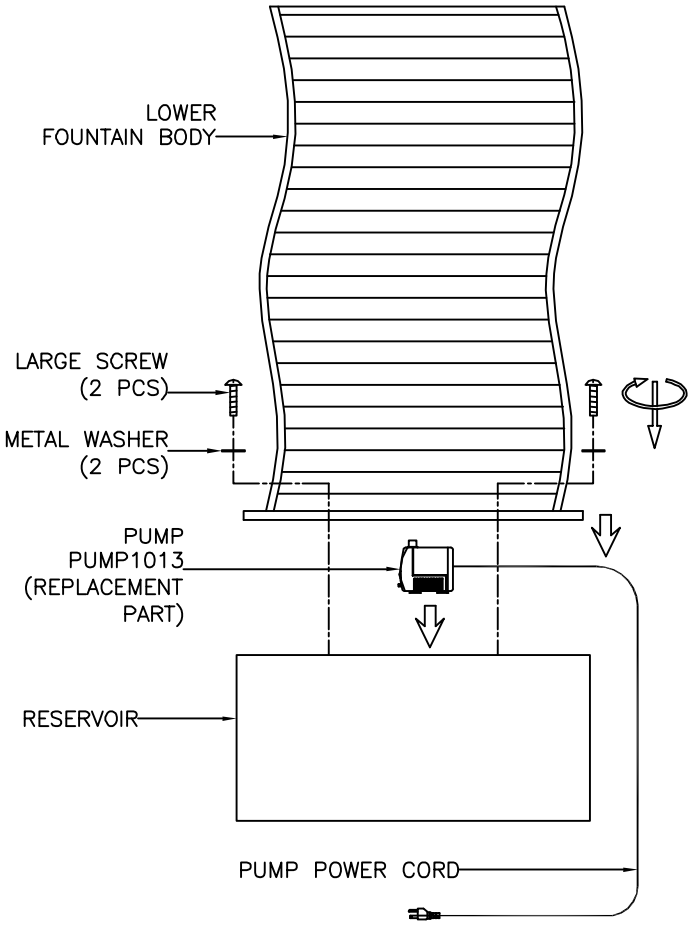

2. FEED RUBBER HOSE THROUGH THE LARGE HOLE IN LOWER FOUNTAIN BODY TOWARD PUMP. INSERT PINS OF UPPER FOUNTAIN BODY INTO THE HOLES OF LOWER FOUNTAIN BODY, THEN SECURE WITH (2) MIDDLE–SIZED SCREWS FROM BACK OF THE LOWER FOUNTAIN BODY.

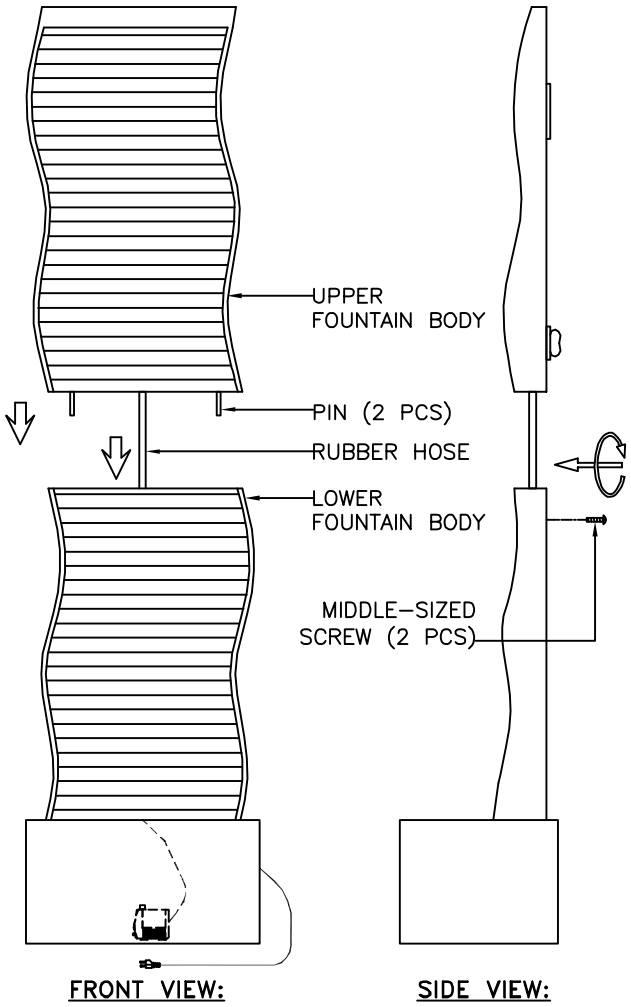

3. ATTACH PUMP TO RUBBER HOSE AND PLACE PUMP FLAT IN RESERVOIR.

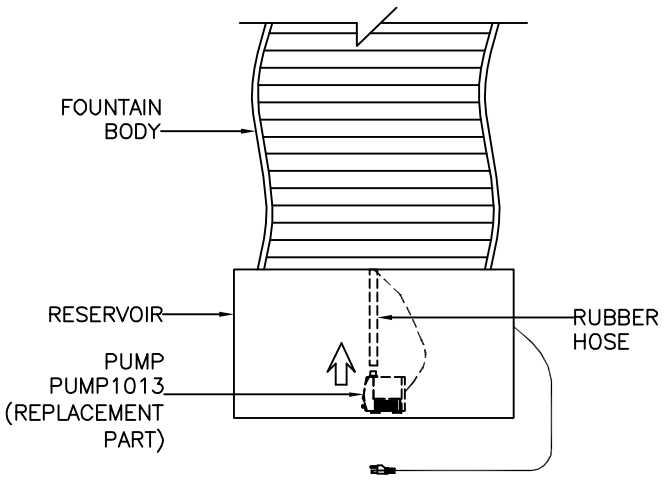

MODEL: 50238

ASSEMBLY INSTRUCTIONS

4. ATTACH LIGHT ASSEMBLY TO BACK OF FOUNTAIN BODY AND SECURE WITH (2) SMALL SCREWS, THEN INSTALL A MR-16 BULB (INCLUDED) TO THE SOCKET.

NOTE: YOU CAN ADJUST THE WATER FLOW CONTROL VALVE ON BACK OF FOUNTAIN BODY TO CONTROL THE SPEED OF THE WATER FLOW, BUT DO NOT TURN OFF THE WATER FLOW CONTROL VALVE.

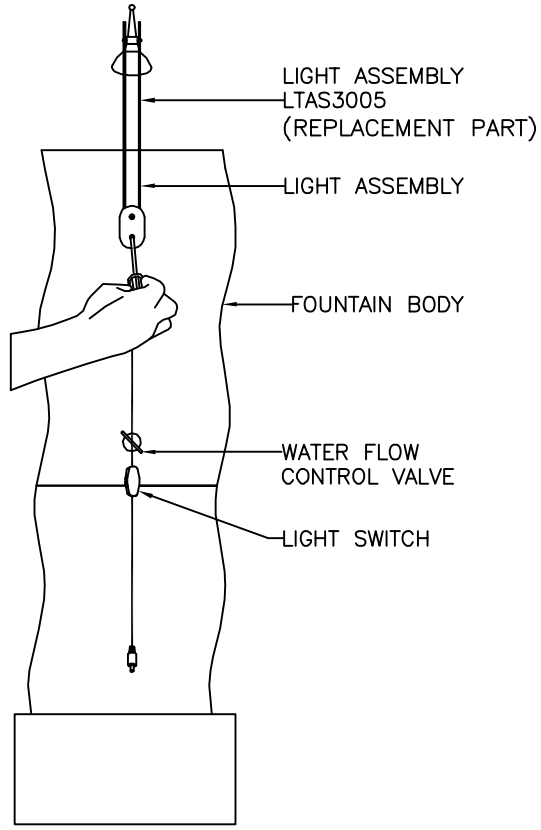

BACK VIEW:

INSTALL BULB:

LOOSEN (2) SMALL SCREWS IN SOCKET TO INSTALL BULB.

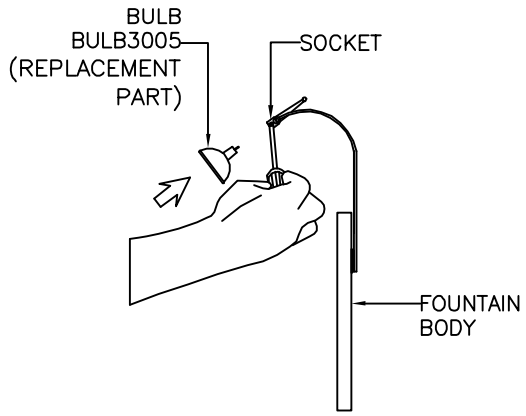

5. FILL RESERVIOR WITH 4 GALLONS OF WATER TO COMPLETELY SUBMERSE THE PUMP. (DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.)

6. PLACE LID INTO RESERVOIR TO COVER IT.

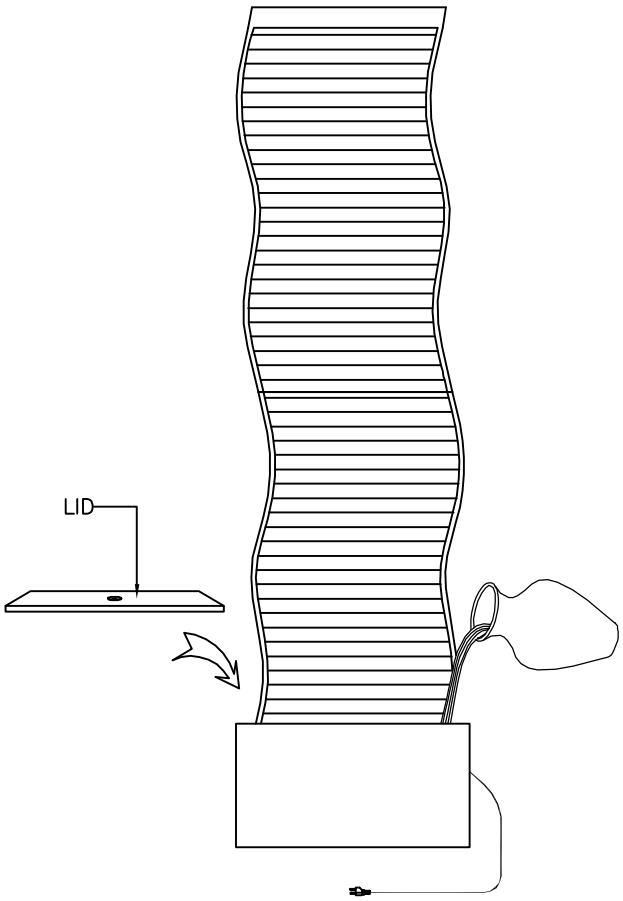

7. PLACE DECORATIVE STONES ONTO TOP OF RESERVOIR.

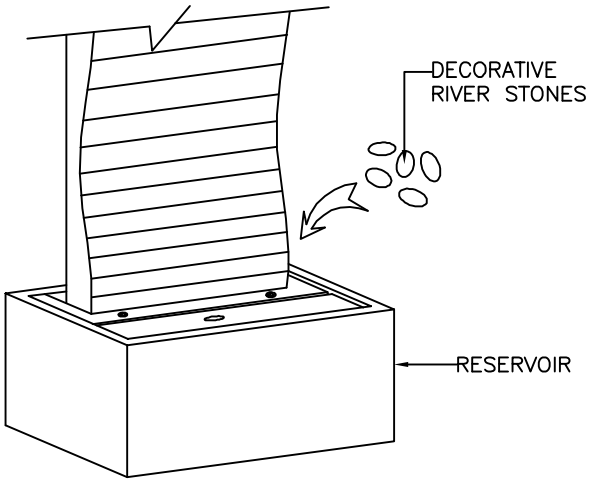

MODEL: 50238

ASSEMBLY INSTRUCTIONS

8. JOIN THE LIGHT CONNECTORS TOGETHER.

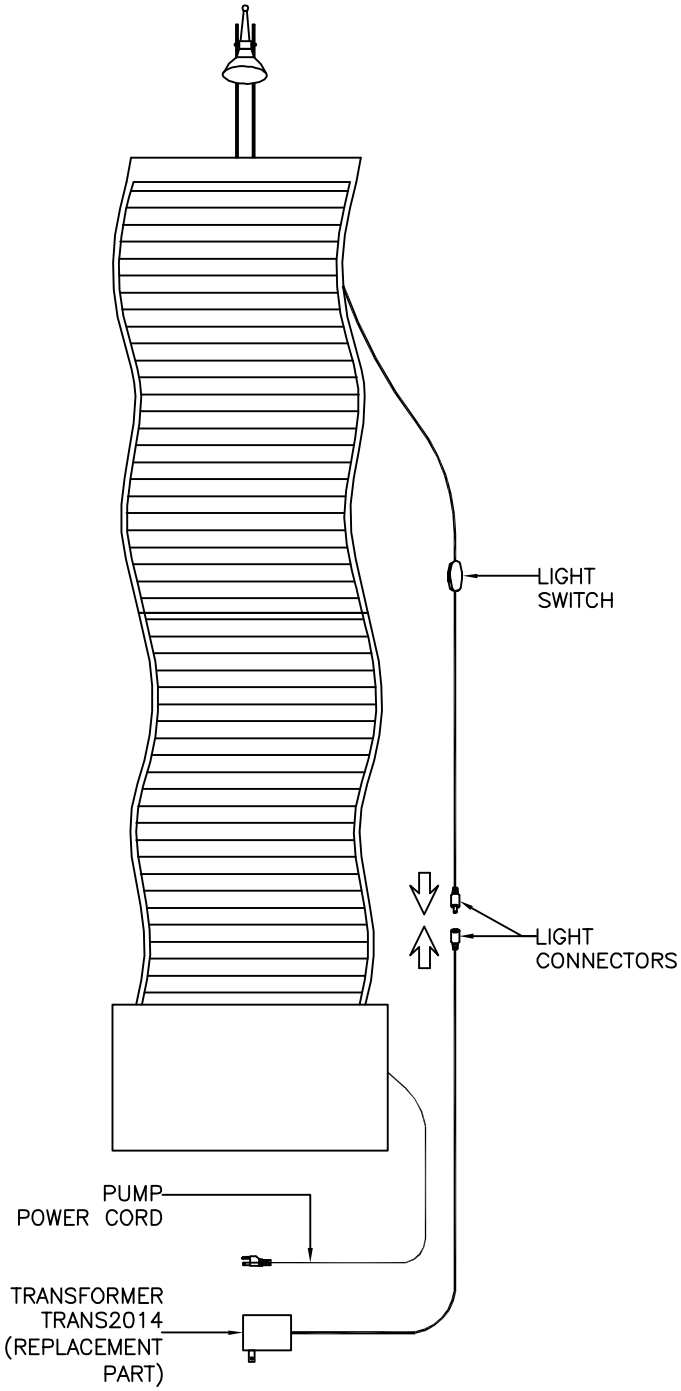

9. PLUG THE PUMP POWER CORD INTO A SOCKET, THEN PLUG THE TRANSFORMER INTO ANOTHER SOCKET AND TURN ON AT LIGHT SWITCH, YOUR FOUNTAIN IS READY FOR USE.

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.

2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.

3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

WARNING:

* THIS FOUNTAIN IS RATED FOR INDOOR USE ONLY.

** ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD–UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

*** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.

AVAILABLE PARTS ARE:
BULB3005 (BULB)
PUMP1013 (PUMP)
TRANS2014 (TRANSFORMER)
LTAS3005 (LIGHT ASSEMBLY WITHOUT BULB)